

CYLINDER STOVES

4150 East 13000 North
Chester, UT 84623
435-436-3829

A-Frame Porch Instruction

Assemble porch frame as per drawing on back. Don't install on end of tent yet.

1. Drape porch over frame and fit grommet on porch ridge over pin at end of ridge pole (#1).
2. Insert porch frame into tent frame and adjust leg to proper height (#2).
3. Porch will overlap tent approx. 10'. Fit grommet on porch ridge over bolt that sticks up through the tent ridge (#3).
4. Remove corner ropes and sidewall pole from tent (#4)
5. Place grommet at bottom of porch (#5) over corner tent stake. Re-install sidewall pole.
6. Sandwich eave grommets on porch (#6) over eave grommet on tent (#4)
7. Reinstall corner rope eye bolt through all three grommets and into sidewall pole (#6). Stake rope out at a 45 degree angle as usual. Pull wall of porch straight (#7) and stake remaining grommets, leaving approximately 2-3" of stake sticking out.
8. Tie ropes to eye bolts and tensioner as shown. Tie a stake loop on other end of rope. Install sidewall poles over stakes (#8)
9. Insert eyebolt on ropes through grommet on porch and into sidewall poles. (#9)
10. Stake out ropes, front corner rope should be at a 45 degree angle to end of porch.
11. Sandwich porch grommets (#11) over grommet on tent and insert a rope down from the top through all 3 grommets and tie a knot. Tie a rope tensioner on the other end of rope. Stake this rope back to the second rope on the tent (ok to share the same stake) adjust tension of ropes to get porch tight and even.

Remove porch in reverse order