



**Cylinder Stoves**

800-586-3829

**Screen Installation Instructions**

Locate the ropes with "S" hooks tied to them at the top or peak of the screen door. Loop the ropes over the ridge pole and hook the "S" hook back into the grommet that the rope came out of. Now take the opposite end of the rope (at bottom of slope) through loop in corner of tent (or around eave pole on internal frames) thread rope through loop tied in first section of rope on screen then cinch tight and tie off (note: on internal frames you may want to rig screen in front of end rafter so screen is between rafter and end of tent)